Wireless Controller for P4

ワイヤレスコントローラー

Model No.T29

User Manual

取扱説明書

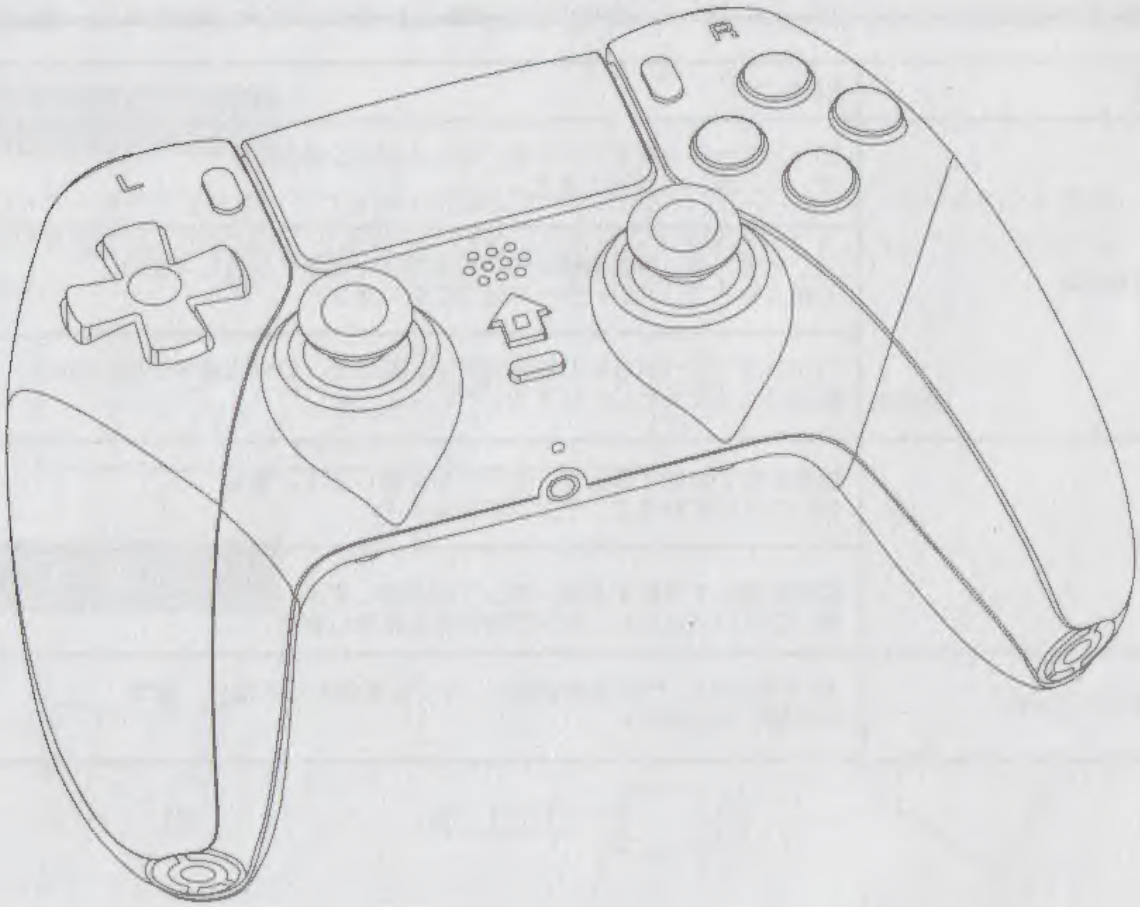

Product Description

This product is a P4 controller, which belongs to wireless Bluetooth controller (using wireless Bluetooth technology).
It Built-in TURBO and Key mapping function , It can remotely controller,which is easy to operate. It can be used for P4 console, P4 Pro and P4 Slim.It compatible with Smartphone and PC games such as D-input and
X-input(PC360) are also supported.

Controller overview:

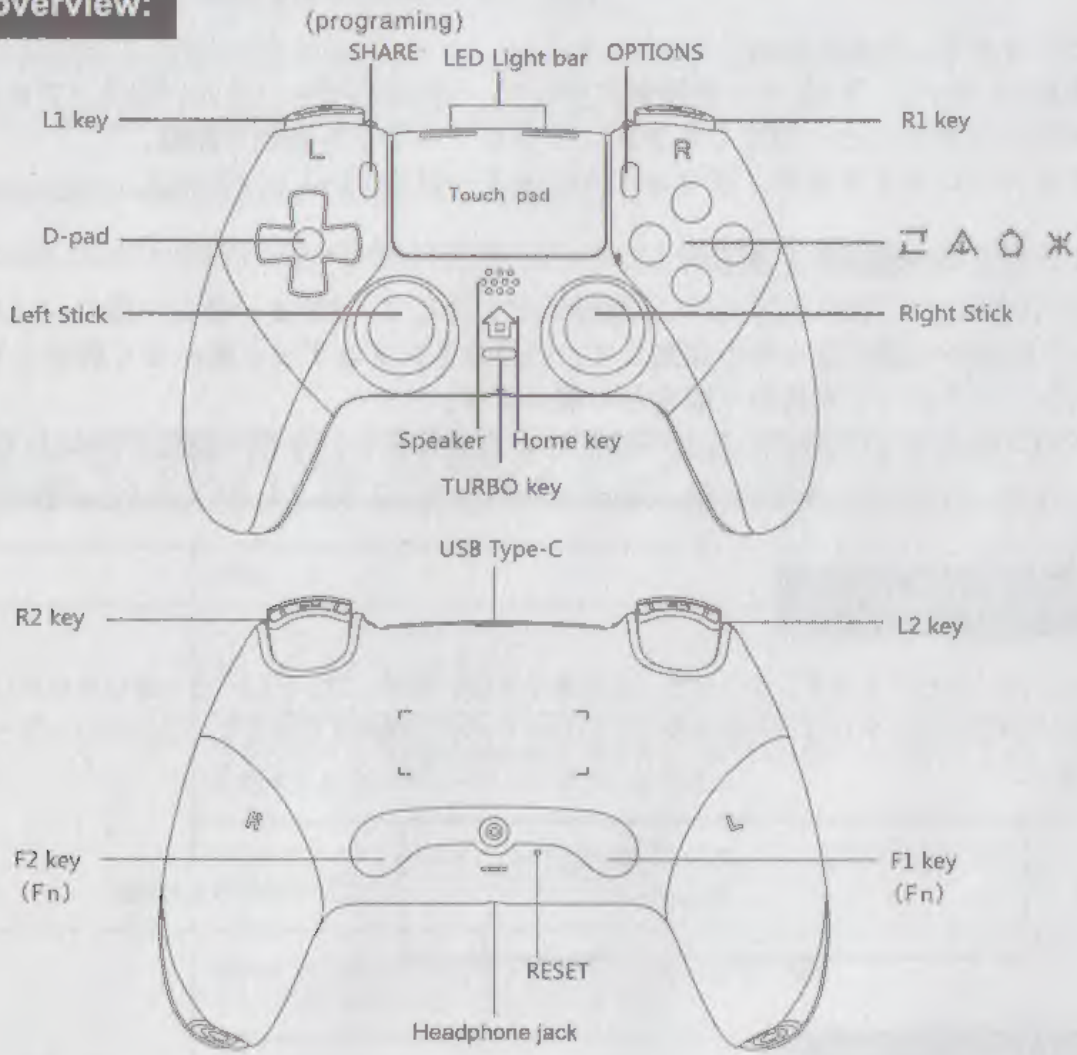

Product Parameter

Voltage: DC 5V
Working Current: <60mA
Sleep Current: 0uA
Battery Capacity: 800mAh
Usage time: About 10 hours
Weight: 260g

Bluetooth 4.2 Transmission Distance: < 10m
Vibration Current: 150mA
Charging Current: About 450mA
Charging time: About 3 hours
STANDYBY: 30 Days
Dimensions: 16.0 x 11.0 x 6.5 cm

P4 Connection

When you use the controller for the first time, you need to connect it with the P4 console: Turn on your P4 console, connect the controller using a Micro-USB cable, and then press the 'Home' button on the controller, select a user.When the controller is connecting to the console,the light bar flashes in white color and then stay in Blue or other colors channel lights, you can remove the cable and use the controller wirelessly.

P5 Connection

When you use the controller for the first time, you need to connect it with the P5 console: Turn on your P5 console, connect the controller using a Typ-C USB cable, and then press the 'Home' button on the controller, select a user.When the controller is connecting to the console,the light bar flashes in white color and then stay in blue or other colors channel lights, you can remove the cable and use the controller wirelessly.

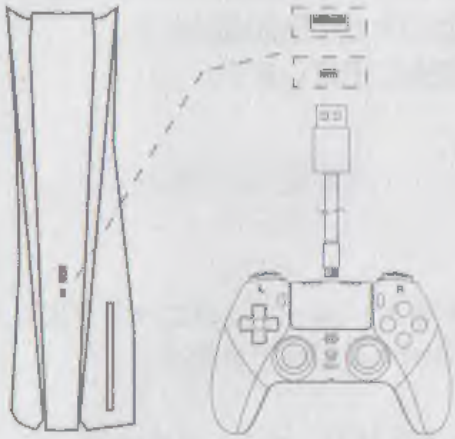

NOTED: The controller just can be use to play the P4 game in P5 console.
Then use this controller to play the P5 game in P5 console that system Would Prompt you to change other controller.

Smartphone Connection

Bluetooth connection:In the off mode, first press button "SHARE" and "HOME", the gamepad enters Bluetooth pairing mode when the light is flashing quickly, search the Bluetooth devices on the Smartphone:

1. iOS Bluetooth Connection: Open the Bluetooth on the iOS devices -> Search the Bluetooth devices,in the "Available Devices" list, click "DUALSHOCK 4 Wireless Controller" to connect. LED lightkeepsonwhenthebluetoothis connected.
2. Android Bluetooth Connection: Open the Bluetooth on the Android devices -> Search the Bluetooth devices,in the "Available Devices" list,Click " Wireless Controller " to connect. LED lightkeepsonwhenthebluetoothis connected.

PC Connection

The gamepad can be connected to PC devices in two ways:

1. Wired connection: Connect to the computer with a USB cable .
2. Bluetooth connection:In the off mode, first press button "SHARE" and "HOME", the gamepad enters Bluetooth pairing mode when the light is flashing quickly, search the Bluetooth devices on the computer, and click the "Available Devices" list"Wireless Controller" to connect. LED light keeps on when the bluetooth is connected.

Note:

1. PC,desktop computer or laptop that with bluetooth function can directly use the bluetooth connection function.
2. Users can buy suitable bluetooth receiver.
3. Define D-input or X-input mode according to the receiver function

Sleep and Wake up

If the Controller fails to connect with console over 30 seconds in search state, it will enter sleep state.

In the connected state, there is no button operation for about 10 minutes, and the Left/Right Stick does not move greatly, and the handle enters the sleep state;

Press the 'HOME' button to turn on your controller, it will reconnect to P4/P5 system automatically.

Turn on/Turn off

1.Press the 'HOME' button to turn on the controller.
2.Turn off the controller, press the PS button until the lightbar turned off or log out of the P4 /P5 system.
3.When the controller is in re-connecting status, it will be turned off if it failed to connect over 60 seconds.

How to Charge?

1.The controller battery charges when you connect the controller to your P4/P5 console with a USB cable.The console must be turned on or in rest mode. The charge level of the battery appears on-screen when you press and hold the PS button. While the system is in rest mode, the light bar slowly blinks orange. When charging is complete, the light bar turns off.

2.It takes approximately 3 hours to charge the controller when the battery has no remaining charges.

TURBO and CLEAR

To activate the turbo hold turbo and press the button you want to assign it to, then let go of turbo, now when you hold the button it will act as if you were repeatedly pressing the button. Generally, a turbo button will switch a button on and off really quickly.Like if you assign turbo to A, it'd have the effect of pressing the button really quickly if you just hold it down.

Clear or stops turbo setting: hold 'turbo' key and press the button that you want to clear.

The turbo function is available for the fire buttons(×,○,□,△, L1,L2,R1,R2)

Key mapping function

- Mapping setting:
  1. Press & hold 'SHARE + Fn' key until the light bar flashes to activate the mapping setting.
  2. Press the button which you want to assign to.
  3. Press the 'Fn' key again to save setting.
  4. The Fn will replace the button (The one you designated)
- Clear mapping:
  Press and hold the SHARE+ Fn until the lightbar flashes to turn off the mapping setting, Fn keys are back to default setting(F1=L1,F2-R1).
- Cancel programming:
  Press and hold the Option Turbo until the lighter flashes and stays on. It stops the mappiing setting. Press Option+ Turbo key combination once more,it reactivate programming setting to be default mode.
- Mappable button: The following buttons can be mappable:
  ×,○,□,△,▲(Up),▼(Down),◀(Left),▶(Right), L3, R3, L1, R1, L2, R2

How to Reset?

If your controller won't pair, won't respond, or is displaying a flashin light, You'll need to reset the controller. To do that just use a small tool and push the reset button.

The reset button is In the hole Where The back of the controller.

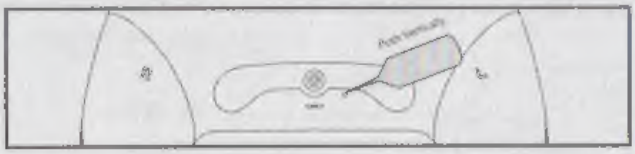

The back of controller

Package Includes

Controllerx1



Type-C USB Cable x1

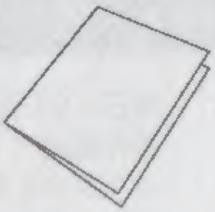

USER GUIDE x1

Attention

- Do not use this product near the fire source;
- Do not put the product in a damp or dusty environment;
- Do not be exposed to direct sunlight or high temperature;
- Do not use chemicals such as gasoline or thinner;
- Do not hit the product or make it fall off due to strong impact;
- Do not bend or pull the cable components strongly;
- Do not disassemble, repair or refit.

Power off/Charge/Low Battery Alarm/Reset

Status	Description
Power off	To turn off controller,press and the HOME button for 5S until the indicators light off.
	When the controller is in re-connecting status, it will be turned off if it failed to connect over 30 seconds
	When the controller is connecting with the console, it will enter into sleep mode when there is no operation over 5 minutes
Charge	When charging in the power-off, the LED Indicators flashes; When the battery is full, The LED indicators turn off ;
	When charging in the power-on, the LED indicators flash; When the battery is full, the LED indicators stay blue.
Low Battery Alarm	When the LED indicators continues to flash,it will run out of power soon, and needs to be charged.

Wireless Controller for P4

ワイヤレスコントローラー

Model No.T29

User Manual

取扱説明書

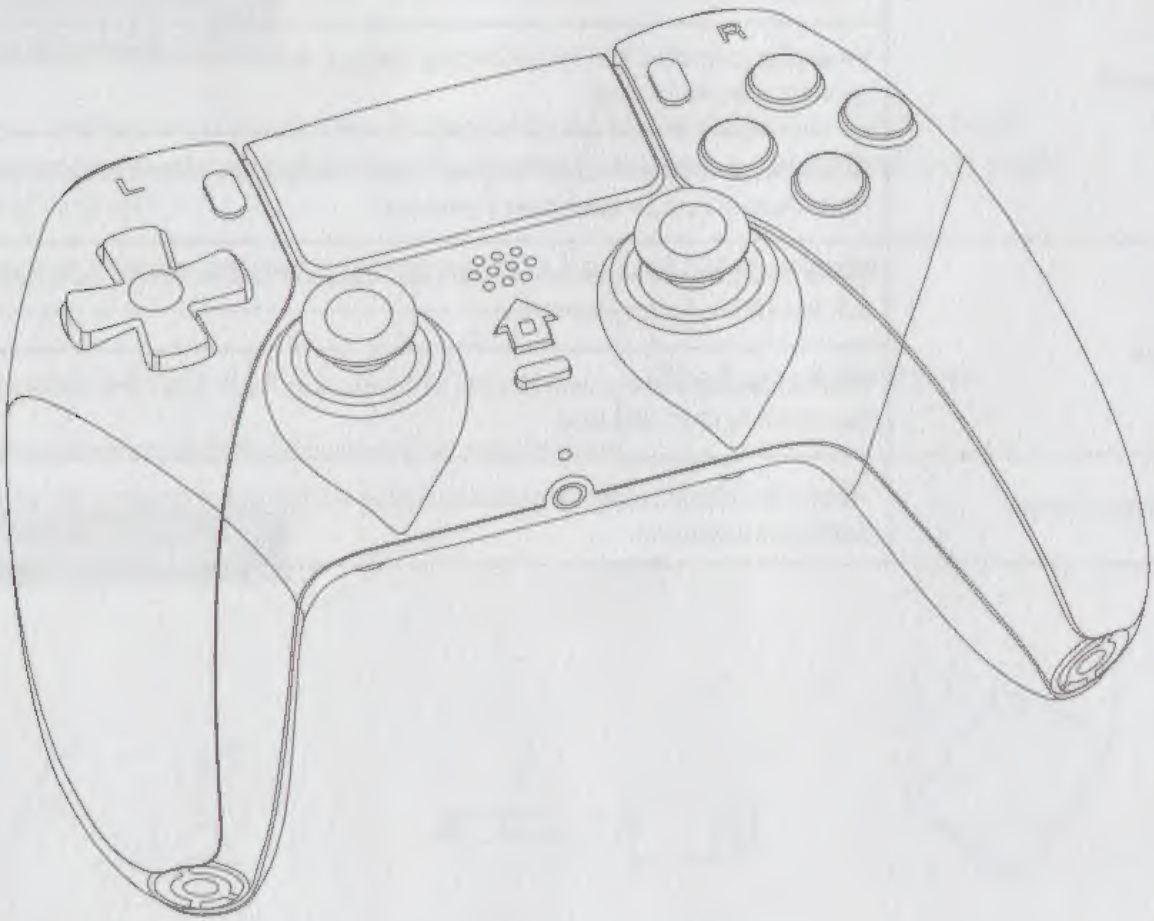

商品概要

本コントローラはP4コントローラで、むせん無線bluetoothコントローラにぞくする属する。
TURBOとマクロプログラミングのきのー機能をもつ持つ。
えんかく遠隔そーさ操作がかのー可能でちえん遅延もない。P4ホスト、P4PRO、P4SLIM
だけでなく、d-input、x-input(PC360)かんれん関連のPCゲームにもたいおー対応する，
スマートフォンなどにもたいおー対応。

手柄概述

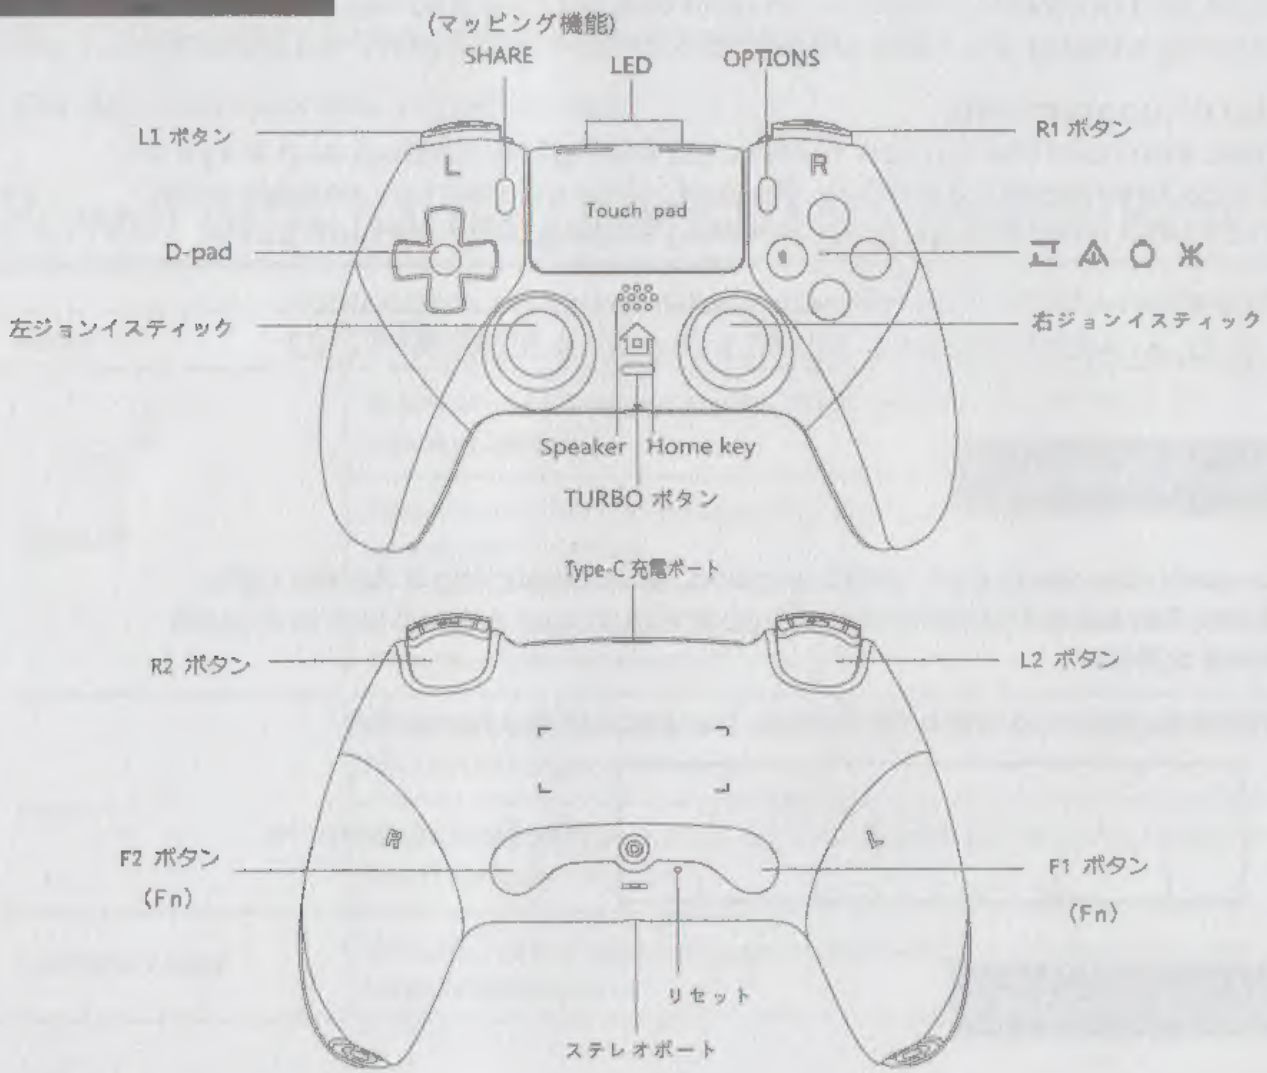

製品パラメータ

电压：DC 5V
動作電流：＜60mA
スタンバイ電流：0uA
バッテリー容量：800mAh
使用時間：約12H
重さ：260 g

Bluetooth（4.2）距離：＜10m
脈動電流：150mA
充電電流：約450mA
充電時間：約3H
待機時間：30日
サイズ：16.0 x 11.0 x 6.5cm

初めとP4に接続された

初めてコントローラーを使うとき、本体に接続するのは必要です：まず、
USBケーブルでP4ホストと接続します。そして、Homeボタンを押しますと、
LEDランプは一つの色で常に点灯して、本体に接続完了します。
と、USBケーブルを抜くことができます、この時、
ペアリングを完了しました。

初めとP5に接続された

初めてコントローラーを使うとき、本体に接続するのは必要です：まず、
Typ-C USBケーブルでP5ホストと接続します。そして、Homeボタンを押しますと、
LEDランプは一つの色で常に点灯して、本体に接続完了します。
と、USBケーブルを抜くことができます、この時、
ペアリングを完了しました。

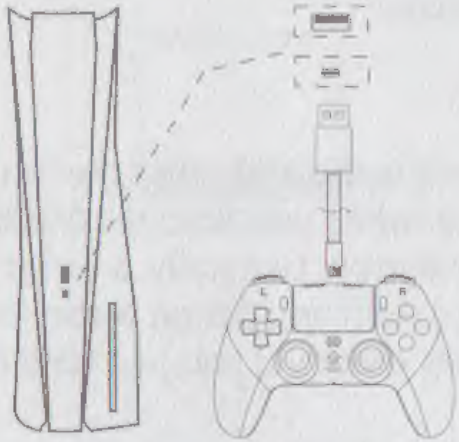

注意：このコントローラはP 5ゲーム機でのみP 4ゲームができます。
このコントローラーでP 5ゲーム機でP 5ゲームをプレイすればシステムは
他のコントローラの交換を指示します。

スマートフォンにせつぞく接続する

Bluetooth 接続:オフ状態, "SHARE" と "HOME"を押し続ける,コントローラがBluetooth ペアリングモードになります,このとき、LEDはすばやく点滅します,次に、スマートフォン でデバイスを検索します。

1.iOS Bluetooth 接続: iOSデバイスのBluetooth機能をオンにします -> ＂利用可能な機器＂ メニューでBluetoothデバイスを見つけます。 “DUALSHOCK 4 Wireless Controller” をク リックしてコントローラーに接続します，完了後、LEDライトは常に点灯しています。

2.Android Bluetooth 接続: Android デバイスのBluetooth機能をオンにします -> ＂利用可能な 機器＂ メニューでBluetoothデバイスを見つけます。 “Wireless Controller” をク リックしてコントローラーに接続します，完了後、LEDライトは常に点灯しています。

PC にせつぞく接続する

コントローラをパソコンに接続する方法は2つあります:

1. データケーブル接続: 正しいUSBデータケーブルを使用してコンピューターに接続します。
2. Bluetooth 接続:オフ状態, "SHARE" と "HOME"を押し続ける,コントローラがBluetooth ペアリングモードになります,このとき、LEDはすばやく点滅します,? に、コンピュータシステム でデバイスを検索します, “Wireless Controller”をクリックしてコントローラーに接続します， 完了後、LEDライトは常に点灯しています。

ご注? ：

1. Bluetooth機能を? えたPC、デスクトップコンピュータ、またはラップトップを直接使用できます。
2.ユーザーは適切なBluetoothレシーバーを購入できます。
3.レシーバー機能に応じてD入力またはX入力モードを定義します

スリープモード と再接続

もし、コントローラーは捜索状態で、30秒以内にP4本体に接続できなくなり、睡眠モデルに入ります；ペアリングした状態で、１０分くらいボタン操作がなく、３Dスティックは□きく動きませんの場合で、睡眠状態に□ります。

睡眠状態でHOMEボタンを押すとコントローラーが起動します。睡眠時間は本体に設定できます。

コントローラーはオフ状態で充電するとき、LEDランプはオレンジの□でゆっくり点滅します。満電状態はLED消灯です

コントローラーがオフになる場合は、PSキー8-10秒を□押してください。

LEDライトが消え、コントローラーがオフになります。

電源を入れる

1.を押して'ホーム'ボタンをオンワイヤレスコントローラー。
2.コントローラをオフにし、ランプバーが消灯するまでPSボタンを押します
P4システムからログアウトします。
3.コントローラがステータスを再接続しているとき、それは60秒以上接続
することができない場合はオフになります。

充電

1.コントローラとp4/p5コンソールをusbケーブルで接続する。
コンソールはオンかスリープモードである必要があります。
充電レベルはpsボタンを押すとシステム画面に表示されます。
充電中にランプがオレンジ色にゆっくりと点滅する。
フル充電時はライトバーが完全に消灯します。

2.充電には約3時間かかります。

(TURBO/CLEAR)機能

コントローラーは本体に接続すると、ユーザーのニーズを応じて、
(×,○,□,△,L1,L2,R1,R2)にTurboを設定できます。

操作方法：(×,○,□,△,L1,L2,R1,R2) ボタンを長く押して、Turboボタンを押すと、Turbo機能は設定しました。

TURBO機能の削除：(×,○,□,△,L1,L2,R1,R2) ボタンを長く押して、Turboボタンを押すと、削除TURBO機能。

マクロプログラミング機能

マクロプログラミング機能設定モード:

1.「Share」キーと「Fn」キーを同時に押して、2秒後にチャンネルLEDランプが速い点滅して、プログラム状態に入ります。
2.割り当てたいボタンを押してください。
3.「Fn」ボタンを押すと、LEDランプが消灯し、表示機能が記録されます。
4.「Fn」がこのボタンのかわり代わりにきの一機能する

マクロプログラム機能の削除:

1.「Share」キーと「Fn」キーを同時に押して、5秒後にチャンネルLEDランプが速い点滅して、LEDランプがてんと一点灯したまま、マクロプログラム機能の削除。
デフォルトにもどす戻す，デフォルトせって一設定:F1=L1、F2=L2。

マクロプログラム機能のをきる切る:

1.「OPTIONS」+「TURBO」どーじ同時におし押して、2びょー秒こー后に、LEDのつーろ通路のランプははやく速くてんめつ点滅して、LEDのランプはずっとあかるく明るくて、Fnのプログラミングのつくえ机の一能をとじ閉じます。
2.「OPTIONS」+「TURBO」をどーじ同時におす押すと、きの一機能がかいふく回復する。

×,○,□,△,▲(Up),▼(Down),◀(Left),▶(Right), L3, R3, L1, R1, L2, R2 の設定が可能です。

どうやってリセットしますか?

コントローラーがペアできず、フラッシュに応答できない場合、コントローラーをリセットします。このようにするには、小さなツールを使ってリセットボタンを押すだけです。コントローラーが元に戻ります。

コントローラーの背面

包装

コントローラーx1



Type-Cケーブルx1

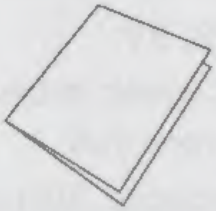

説明書x1

注意事項

⊘ 火元の近くで本製品を使用しないでください；

⊘ 製品を湿気やほこりの多い環境に置かないでください；

⊘ 直射日光や熱源を避けてください；

⊘ ガソリンやシンナーなどの化学薬品は使用しないでください；

⊘ 製品に衝突したり、強い衝撃で落下しないでください；

⊘ ケーブルの部品を強く曲げたり引っ張ったりしないでください；

⊘ 分解したり、修理したり、改装したりしないでください；

△ 包装上の画像は実際の商品とは違っているかもしれません；

△ メーカーは製品の設計や規格を変更する権利を保留しています；予告なく、申し訳ございません。

電源を切る/充電/低電力アラーム/リセット

状态	説明
電源を切る	コントローラーをオフにして、ホームボタンを5秒間押して、ランプが消えます。
	コントローラーが再接続状態にある場合、接続に失敗して30秒を超えるとコントローラーがオフになります。
	コントローラーが本体と接続されている場合、分以上動作しない場合はスリープモードに入ります。
充電	電源を切て充電するとき、ランプが点滅します。電池がいっぱいになると、ランプが消えます。
	電気を通して充電する時、ランプが点滅します。電池がいっぱいになると、ランプは青色を維持します。
低電力アラーム	赤いLEDのランプが点滅すると、すぐに電源がなくなり、充電が必要になります。